
Installation Instruction LED Area Light

This area light is available in SQUARE/ROUND POLE ARM, ADJUSTABLE SLIP FITTER, ADJUSTABLE YOKE mountings.


A: SQUARE OR ROUND POLE ARM_MOUNT

- 1. Remove ARM COVER from ARM.
- 2. Locate ARM onto POLE, and insert LONG BOLTS through ARM, GASKET and threaded into BOLSTER PLATE.
- 3. Slide MOUNTING ADAPTOR of FIXTURE into ARM.
- 4. Tighten (4) socket head set screws located on top of MOUNTING ADAPTOR.
- 5. Route the cord coming from the fixture through ARM and then through the pole.
- 6. Install ARM COVER back to ARM.

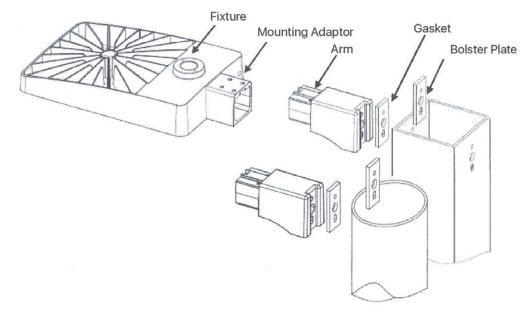

B: ADJUSTABLE SLIP FITTER MOUNT

- 1. Install ADJUSTABLE SLIP FITTER on to TENNON.
- 2. Slide MOUNTING ADAPTOR of FIXTURE into SLIP FITTER ADAPTOR.
- 3. Tighten (4) socket head set screws located on top of MOUNTING ADAPTOR.
- 4. Route the cord coming from the fixture through MOUNTING ADAPTOR, SLIP FITTER ADAPTOR, TENNON ADAPTOR and then through pole.

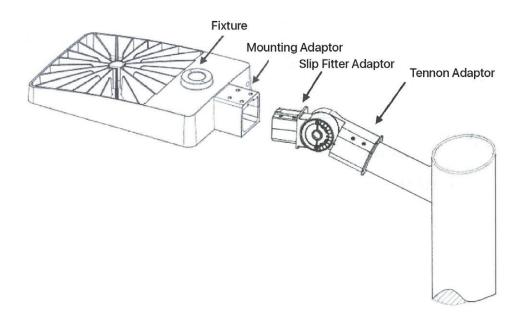




TO ORDER PLEASE CALL 1-877-736-0447 OR EMAIL: SALES@TUROLIGHT.COM

Tel: (416) 736-0447 • Toll Free: 1 (877) 736-0447 • Fax: (416) 736-4890 • Email: info@turolight.com • Website: www.turolight.com

Installation Instruction LED Area Light

C: ADJUSTABLE YOKE MOUNT

- 1. Check that the surface structure is drilled according to Yoke Mount Drilling Pattern, drill a minimum of three (3) holes in the surface where the luminaire is to be mounted.
- 2. Ensure that the mounting position can safely support the weight of the luminaire.
- 3. Mount the Trunnion Bracket using studs to the surface structure. Make sure that Yoke Bracket is securely attached.
- 4. Adjust the angle as needed.
- 5. Slide Fixture Head and Mounting Adaptor onto Trunnion Bracket. Tighten 4x screws on top of Mounting Adaptor.
- 6. Make the necessary electrical connections. SEE WIRING for Electrical Connection and wiring diagram instructions.

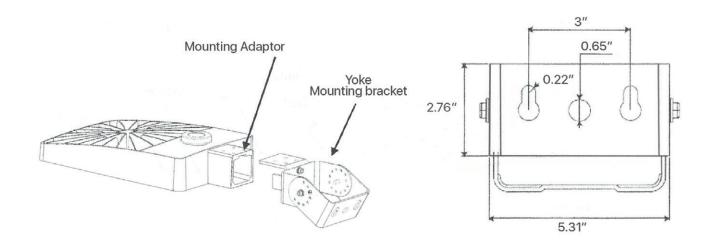



TO ORDER PLEASE CALL 1-877-736-0447 OR EMAIL: SALES@TUROLIGHT.COM Tel: (416) 736-0447 • Toll Free: 1 (877) 736-0447 • Fax: (416) 736-4890 • Email: info@turolight.com • Website: www.turolight.com